





Flex 150/300

Worktable – Operating instructions

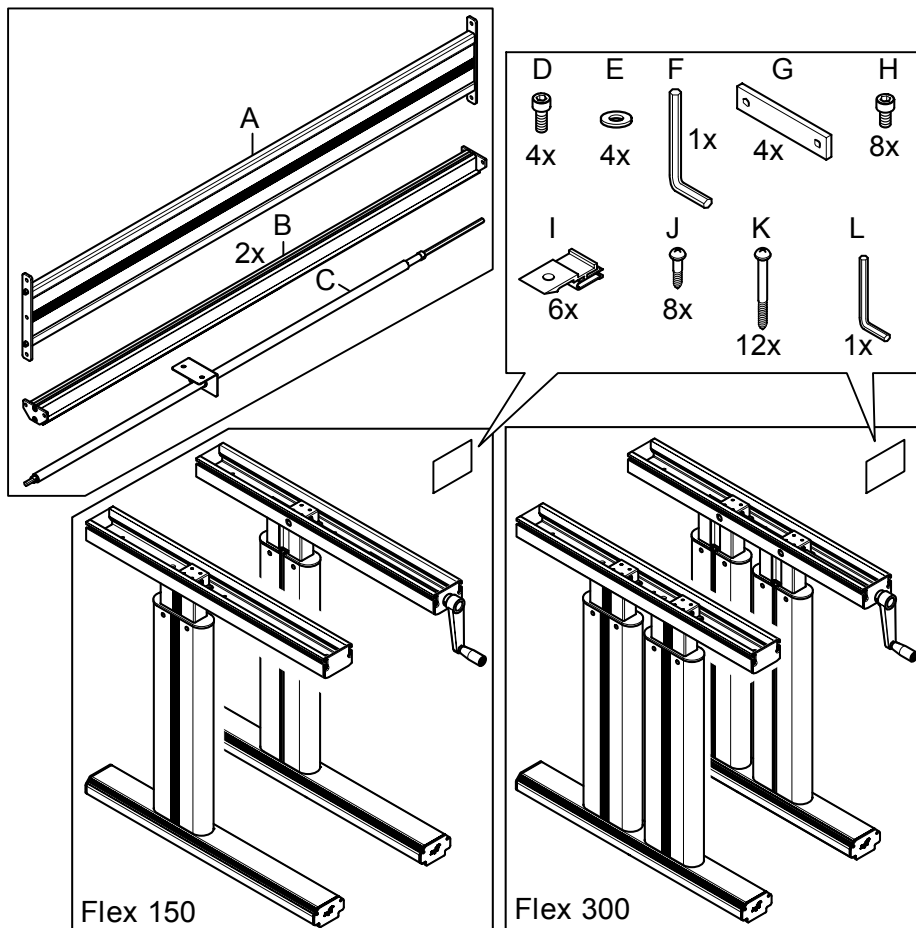





1

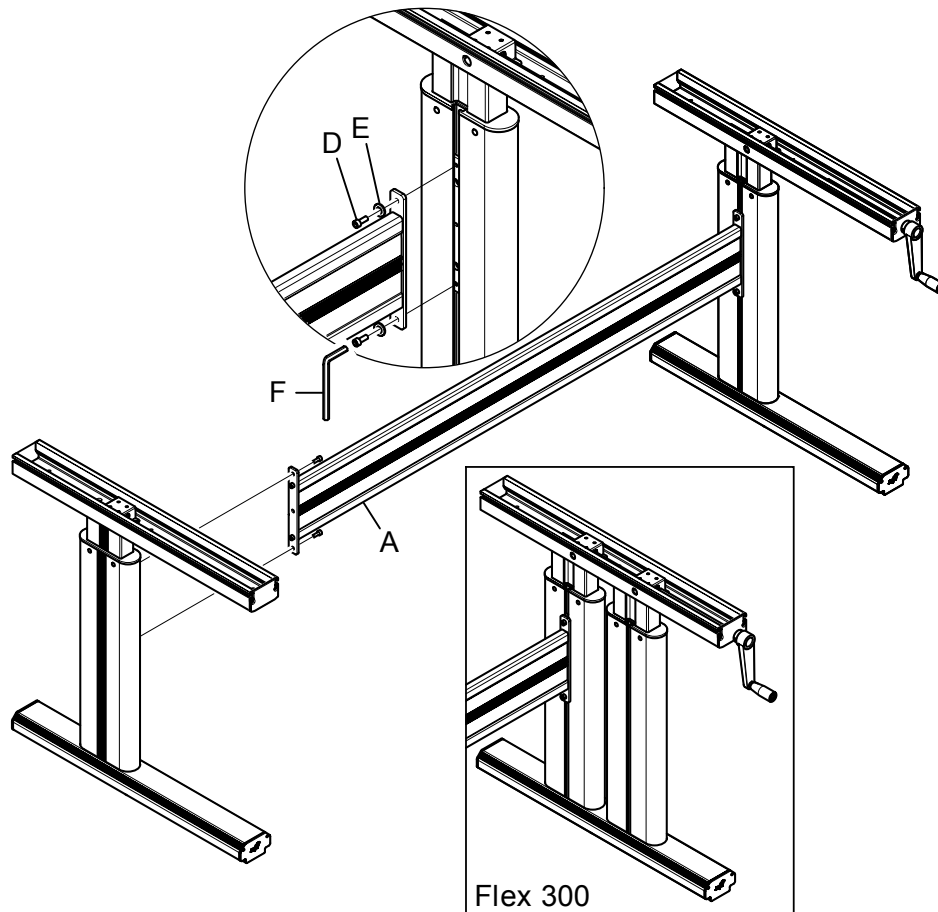


2

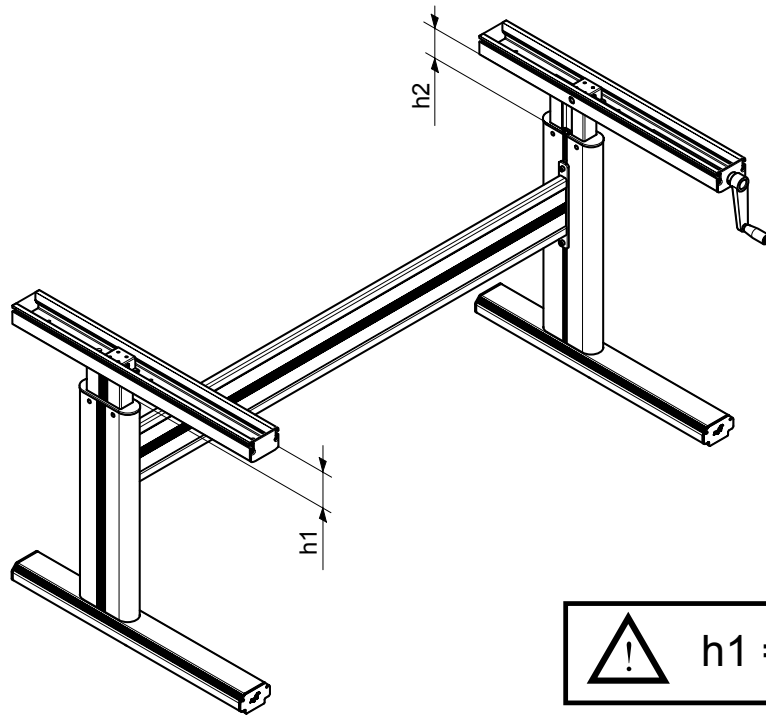


3

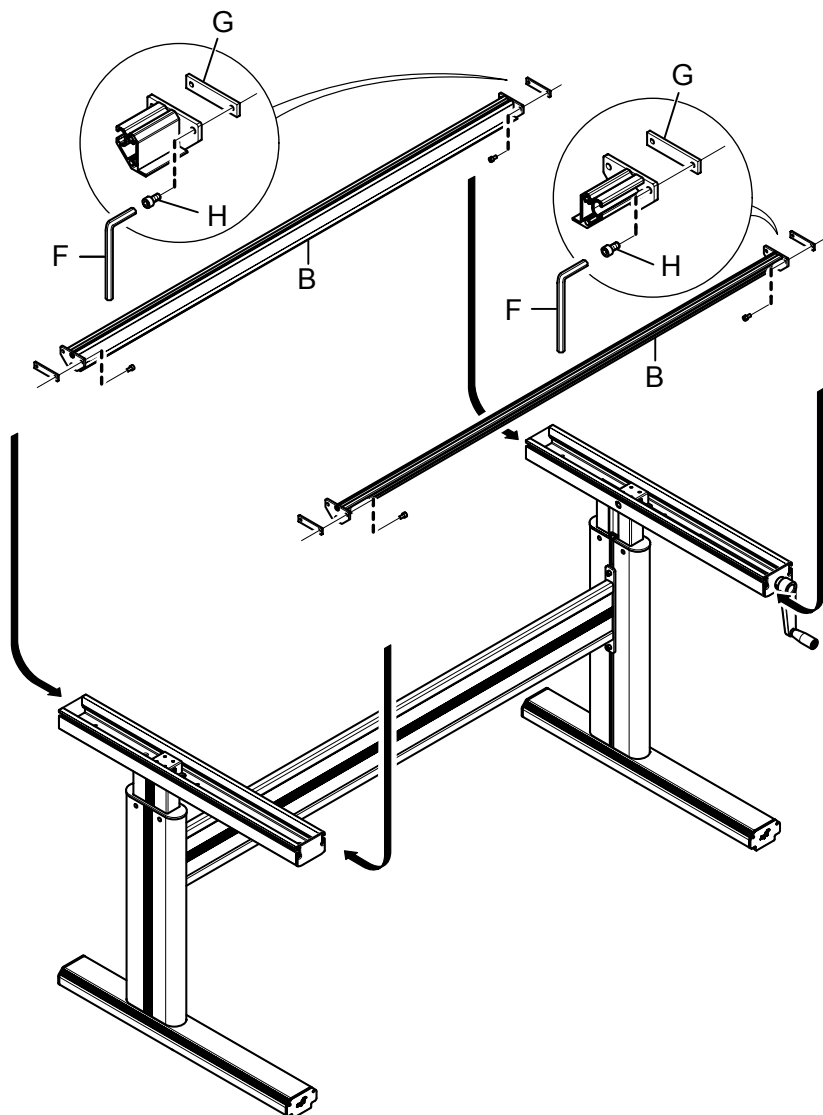


4

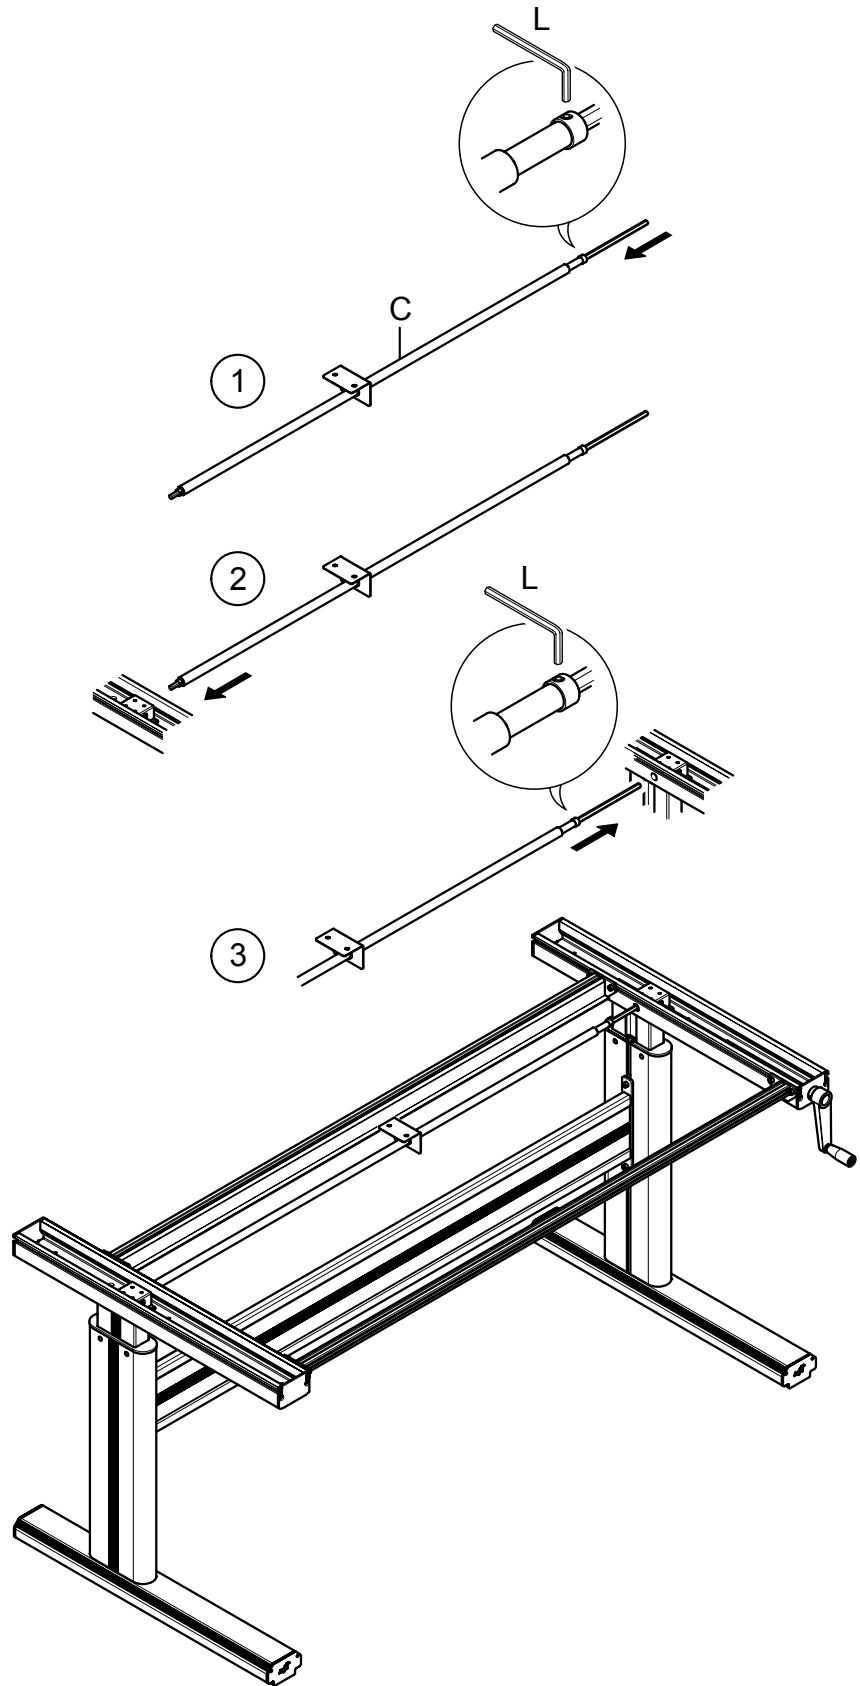

5

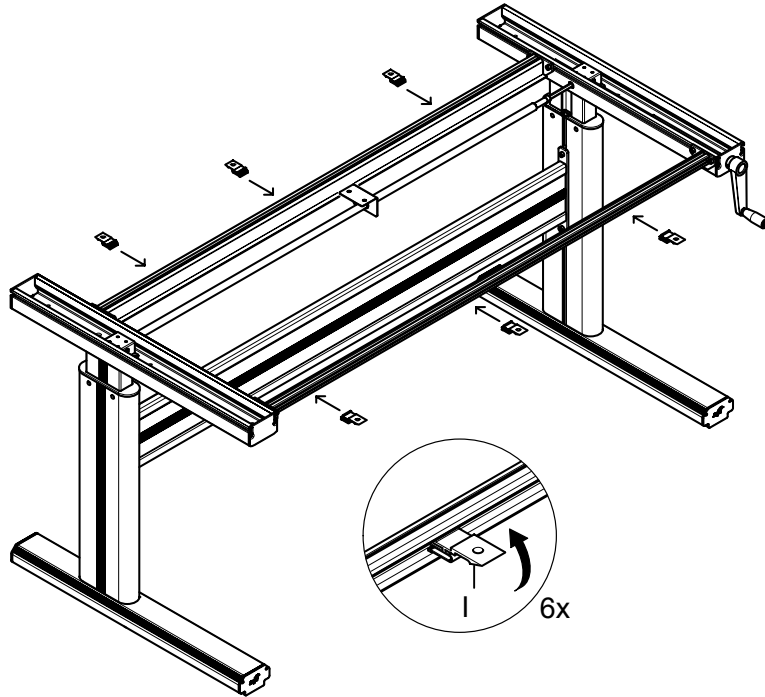

6

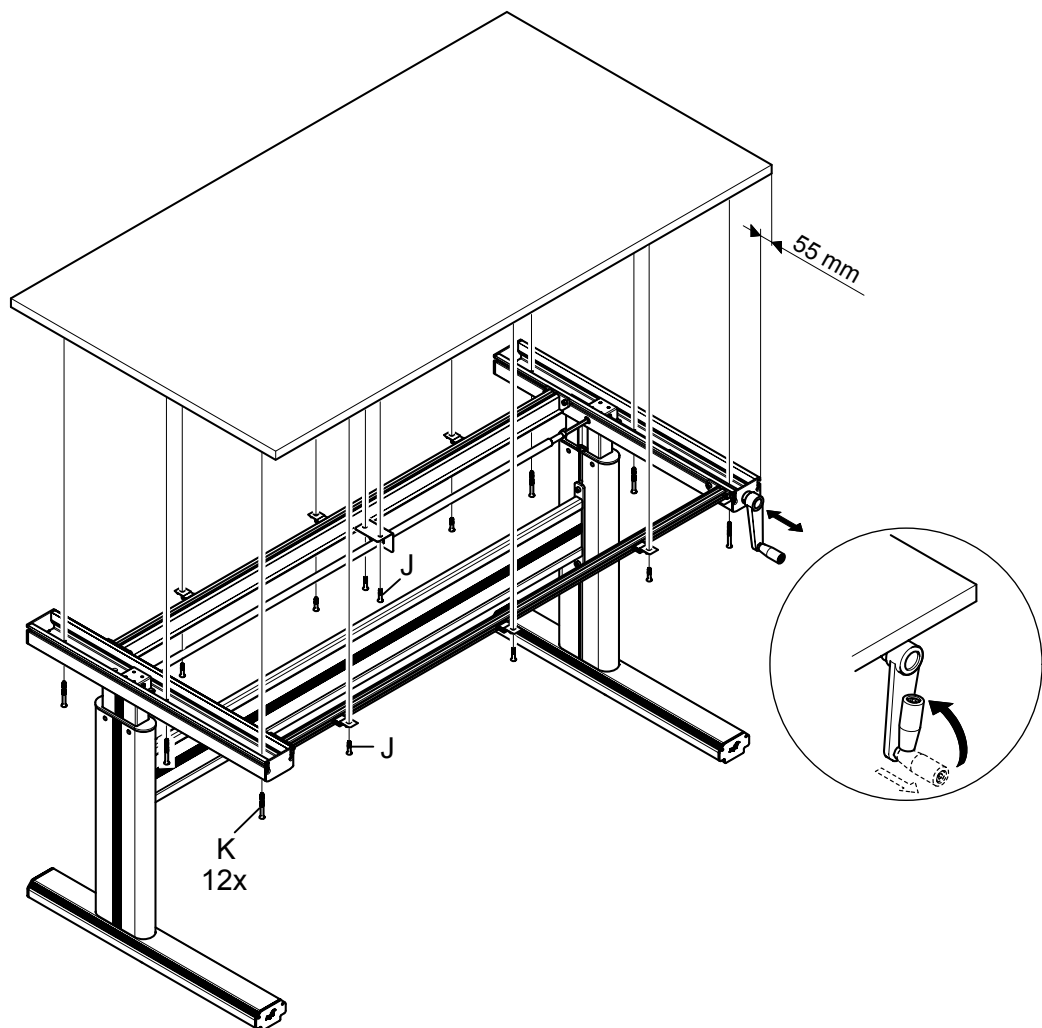

Installation instructions

- Place the table at least 120 mm from other objects, eg, adjoining tables, equipment, wall mounted shelves, etc to avoid trap hazard.
- Make the top of the table level, ie, with the aid of the adjustable feet on the frame.
- Test run the table and ensure that the drive axle works on both sides.


Additional safety devices must be mounted in accordance with instructions from Gigant if the table is to be placed in series. When moving the table, never lift it by the top of the table because the frame is too heavy.

Description

The table is made for indoor use in an industrial or office environment.

Configuration

The figure shows the main parts of the table. The table should be completed with a suitable tabletop from Gigant's product range.

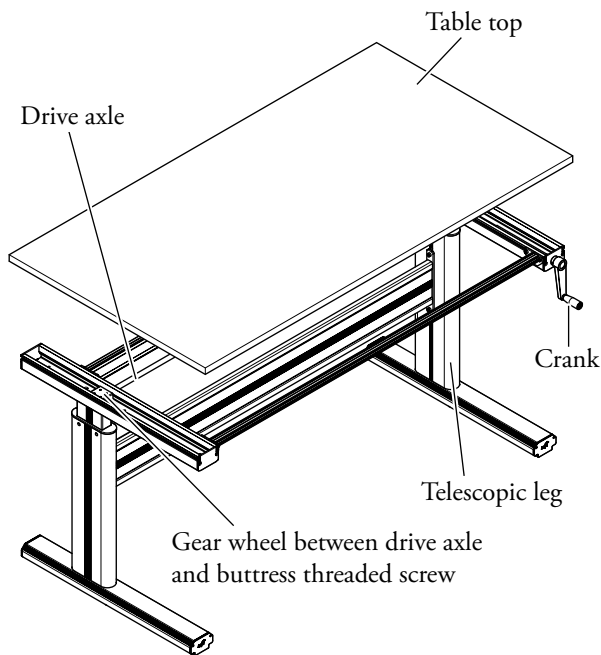

Function

The lifting function of the table is achieved by a crank that transfers force via a gear wheel to the drive axle. The drive axle in turn is connected via gear wheels to a buttress threaded screw in each of the telescopic legs.

Glide plates fitted in each telescopic leg ensure smooth and even lifting action.

The crank can be pushed in under the table top when not in use.

Accessories

Accessories that are approved by Gigant for tables Flex 150 and Flex 300 include the following:

- Set of wheels.
- Drawer and drawer suspension.
- Extensionframe for extensions.
- Tilttable tabletop.
- Undershef.

Operating instruction

Raising and lowering the table

- Ensure that the table top, and anything placed on the table, has clearance in relation to surrounding objects.
- Pull the crank forward so that it is clear of the table top.
- Crank to the desired height and then push the crank back under the table top.

NB! When the table height is adjusted in right position, the table has to be locked by pushing the crank under the table top.

Warning!

Observe the danger of crushing between the table top or frame and adjoining equipment when raising and lowering.

The danger of tipping must be considered if load protrudes beyond the extent of the frame.

For tables with a top that can be sloped:

Warning!

Observe the danger of crushing if the table is fitted with an adjustable sloping top.

Caution. The top may not be sloped when loose objects are on the table since this could otherwise result in personal injury.

Maintenance

All moving parts are lubricated at the factory and are therefore free from maintenance.



www.gigant.co.uk