



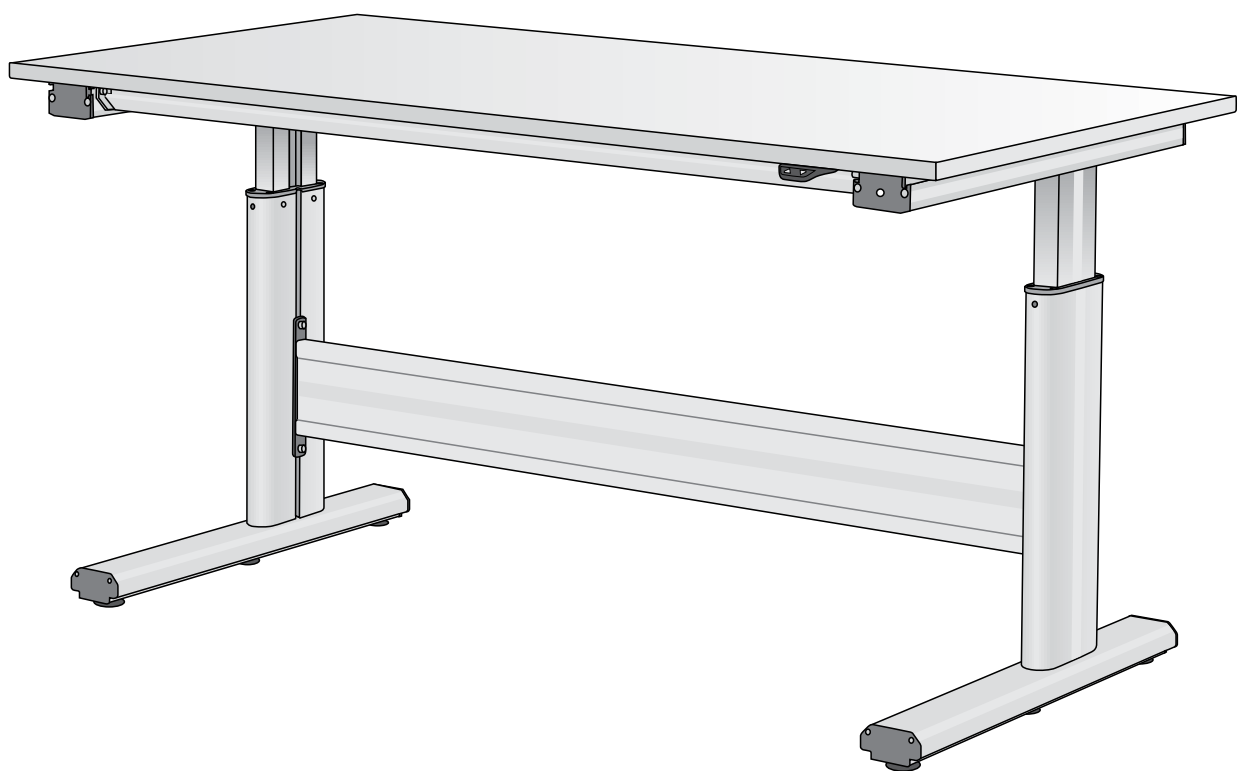


# Flex 200

Worktable – Operating instructions




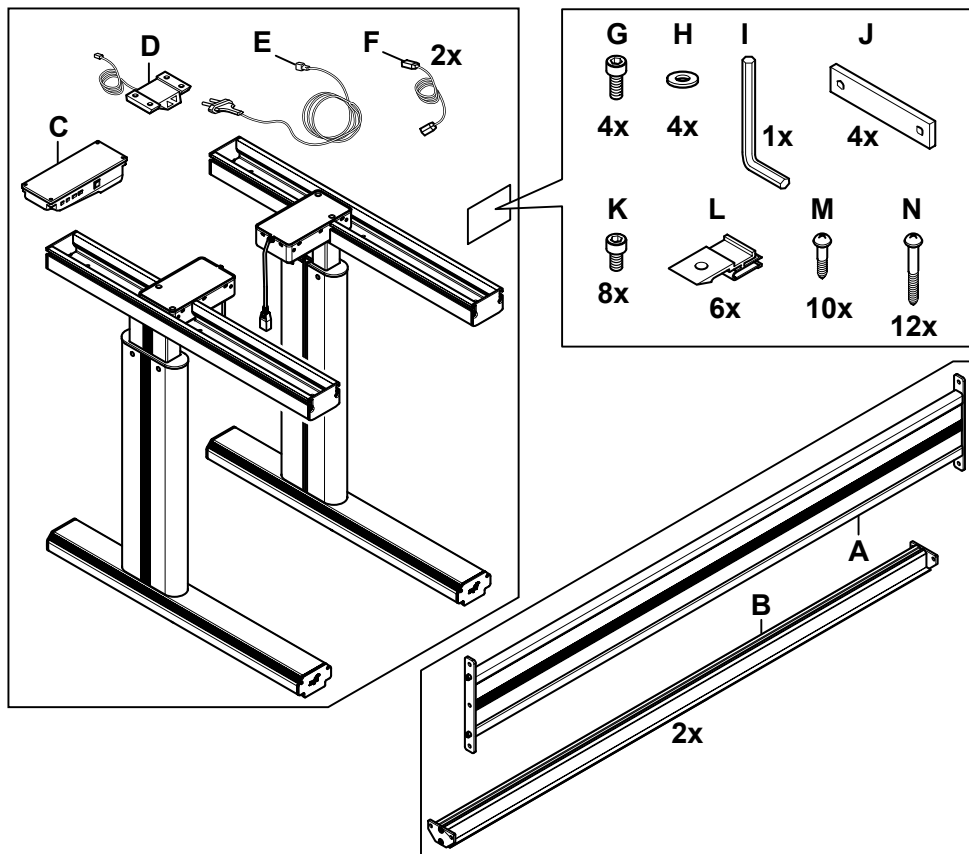


1

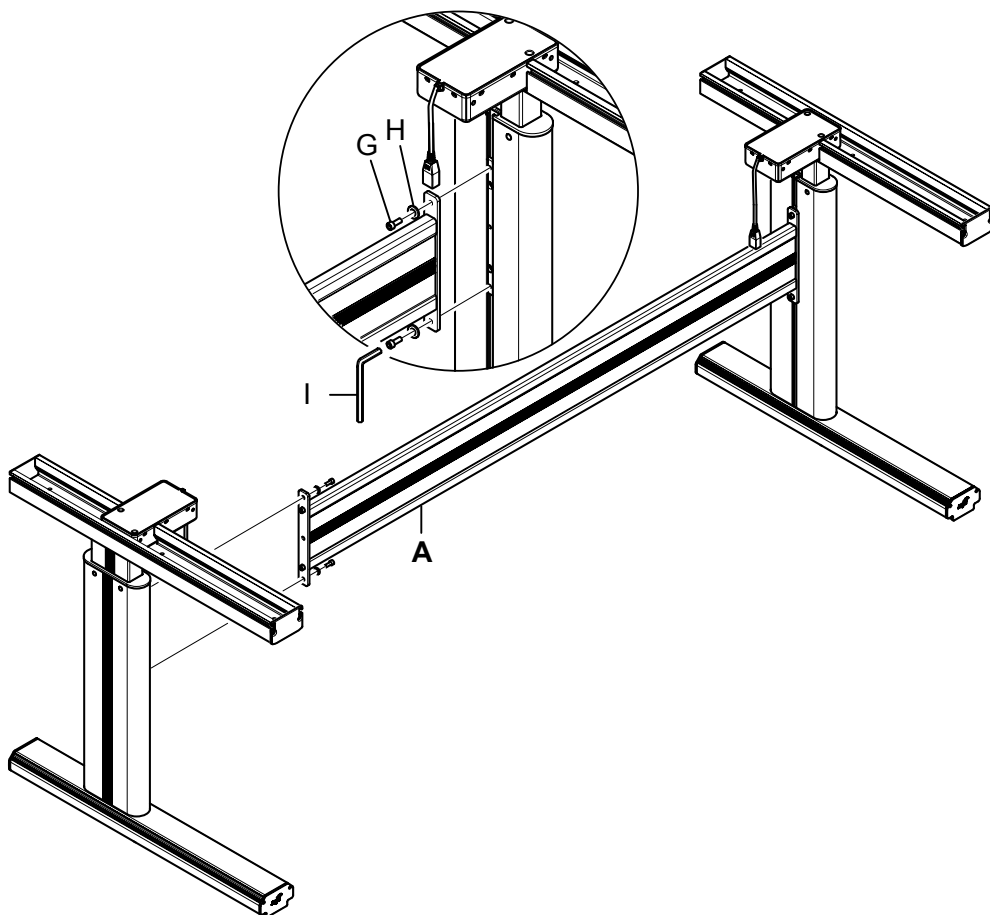


2

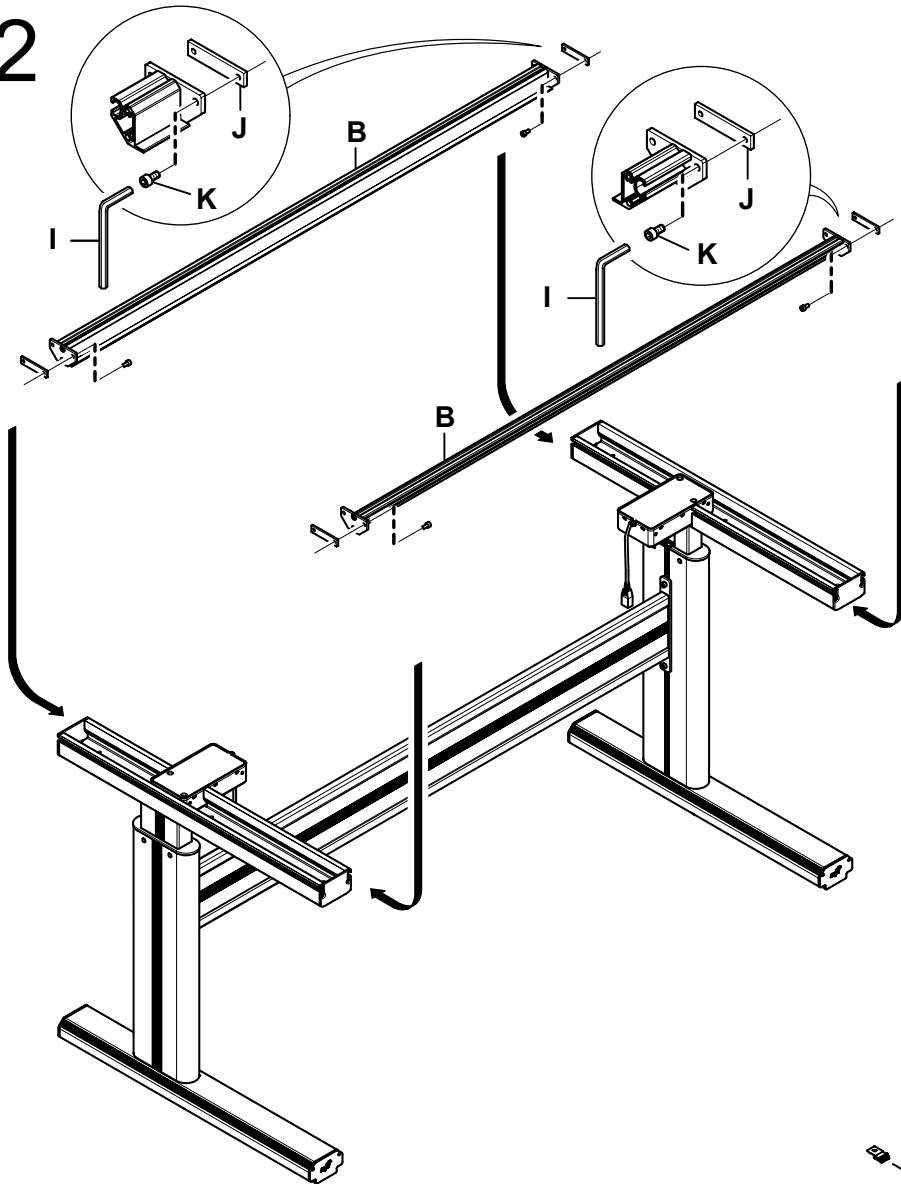

3

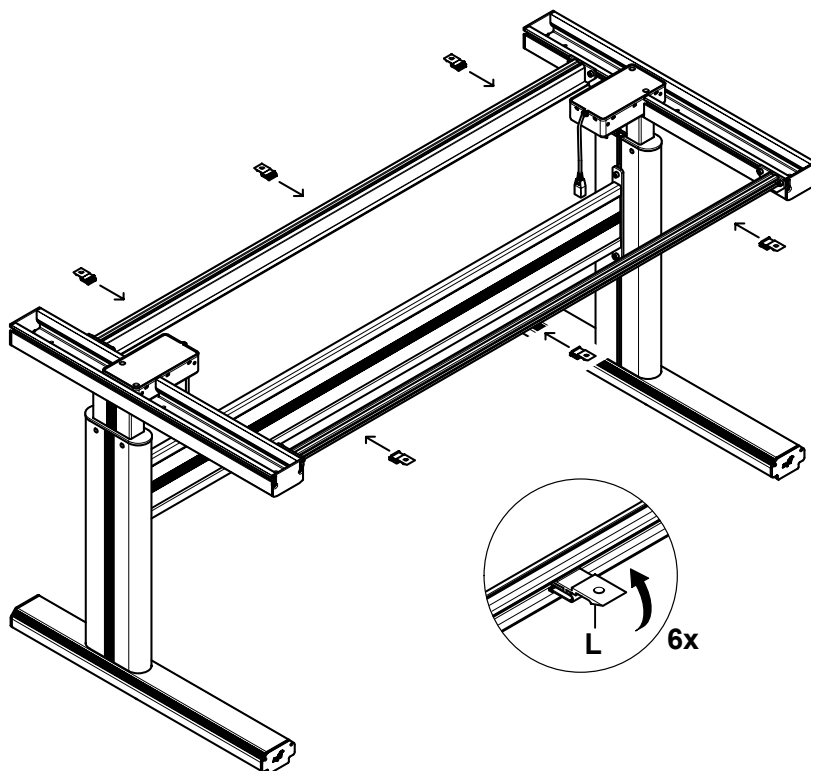

4

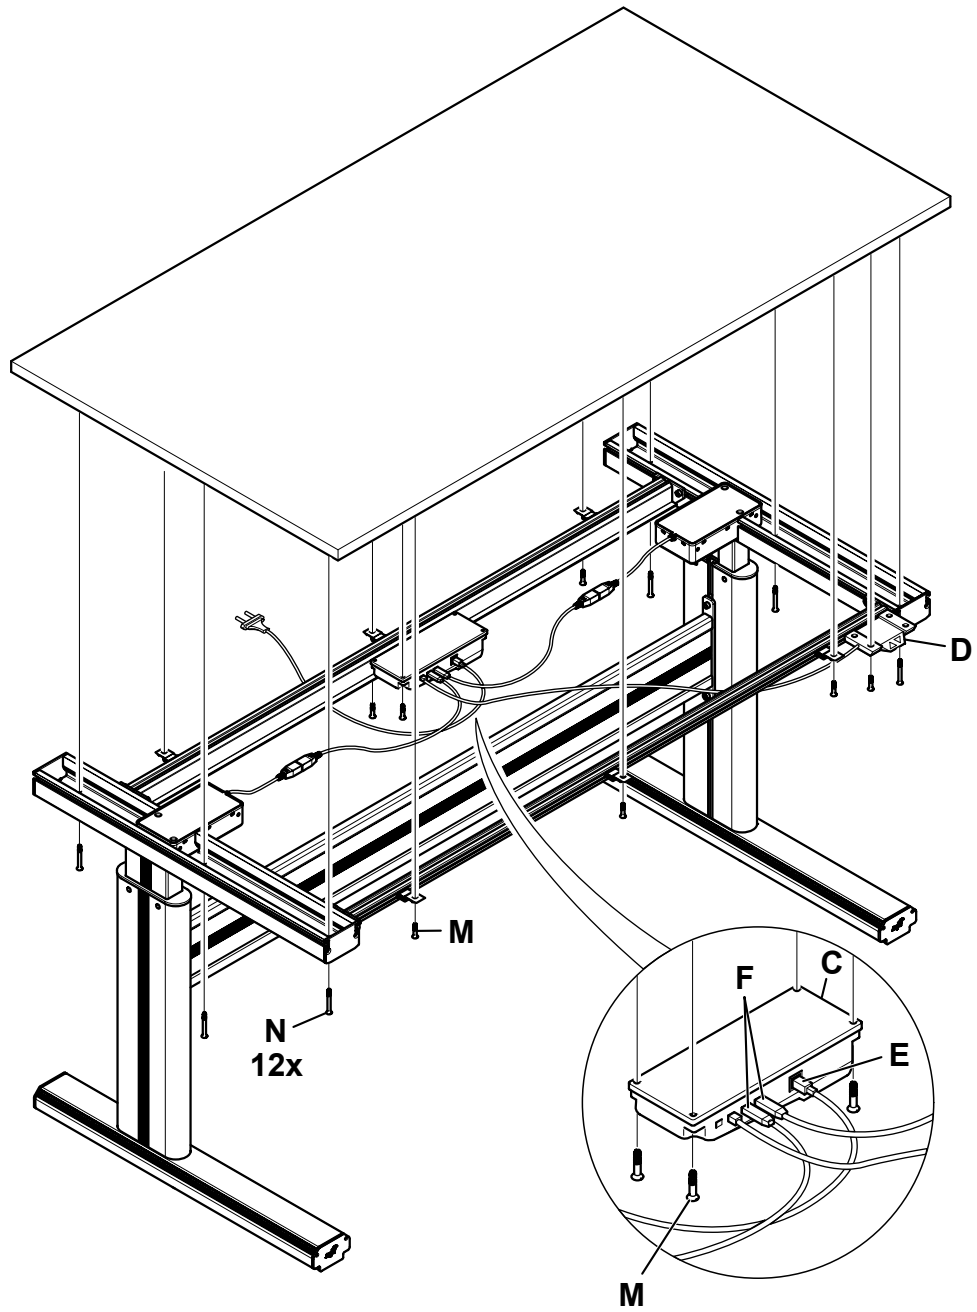

## Installation instructions

- Place the table at least 120 mm from other objects, eg, adjoining tables, equipment, wall mounted shelves, etc to avoid trap hazard.
- Make the top of the table level, ie, with the aid of the adjustable feet on the frame.

### IMPOR TANT!

The table must be activated by press the down button on the table control one or two times and then keep the button pressed until the table has reach its bottom level. The table will then raise app. 5mm. Don't release the button until the table stands still. Observe! If the button is released before the complete procedure is carried out, the table will not be activated and the procedure has to be started from the beginning again. Sometimes the down button has to be pressed two times to start the activating due to that the electronic can be in different positions.

- Ensure that electric cables are undamaged and plug in the power cable of the table, 230 V AC,  $\pm 10\%$ , 50 Hz.
- Test run the table and ensure that the drive axle works on both sides.


Additional safety devices must be mounted in accordance with instructions from Gigant if the table is to be placed in series. When moving the table, never lift it by the top of the table because the frame is too heavy.

## Description

The table is made for indoor use in an industrial or office environment and for 10% intermittent lifting operation, ie, max 2 min per 18 min.

## Configuration

The figure shows the main parts of the table. The table should be completed with a suitable tabletop from Gigant product range.

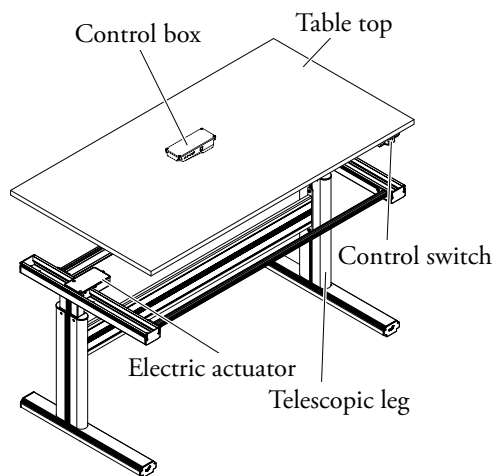

## Function

Lifting action of the table is achieved by an electric actuator in each telescopic leg. Glide plates fitted in each telescopic leg ensure smooth and even lifting action. The sound pressure level of the table is lower than 70 dB(A).

## Accessories

Accessories that are approved by Gigant for tables Flex 200 include the following:

- Set of wheels.
- Drawer and drawer suspension.
- Extensionframe for extensions.
- Table control with 3 memory positions.
- Tilttable tabletop.
- Undershef.

## Operating instruction

Raising and lowering the table

- Ensure that the table top, and anything placed on the table, has clearance in relation to surrounding objects.
- Press the switch to give the desired action. (The motor runs so long as the switch is actuated.)

### Warning!

Observe the danger of crushing between the table top or frame and adjoining equipment when raising and lowering.

The danger of tipping must be considered if load protrudes beyond the extent of the frame.

For tables with a top that can be sloped:

### Warning!

Observe the danger of crushing if the table is fitted with an adjustable sloping top.

The top may not be sloped when loose objects are on the table since this could otherwise result in personal injury.

## Manual reset / zero position

In case of a failure so that the telescopic legs are not working parallel, stroke or upper / lower end position is changed, a manual reset has to be performed, please see Installation Instructions.

## Maintenance

The power cable must be unplugged before attempting any service work on the table.

All moving parts are lubricated at the factory and are therefore free from maintenance.



[www.gigant.co.uk](http://www.gigant.co.uk)